



Pre-spaced Cut Vinyl Application


Position the sheet and tape in place as shown

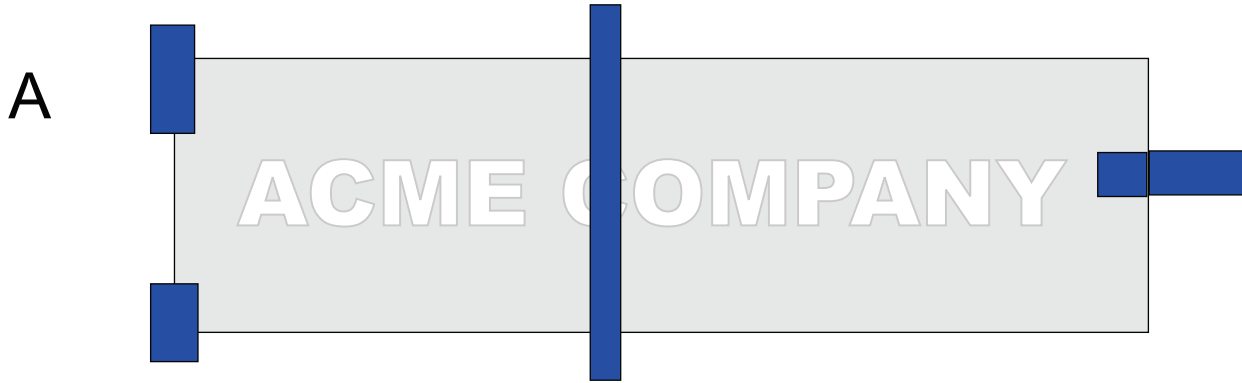

Rip the right hand tape as you lift the right side.

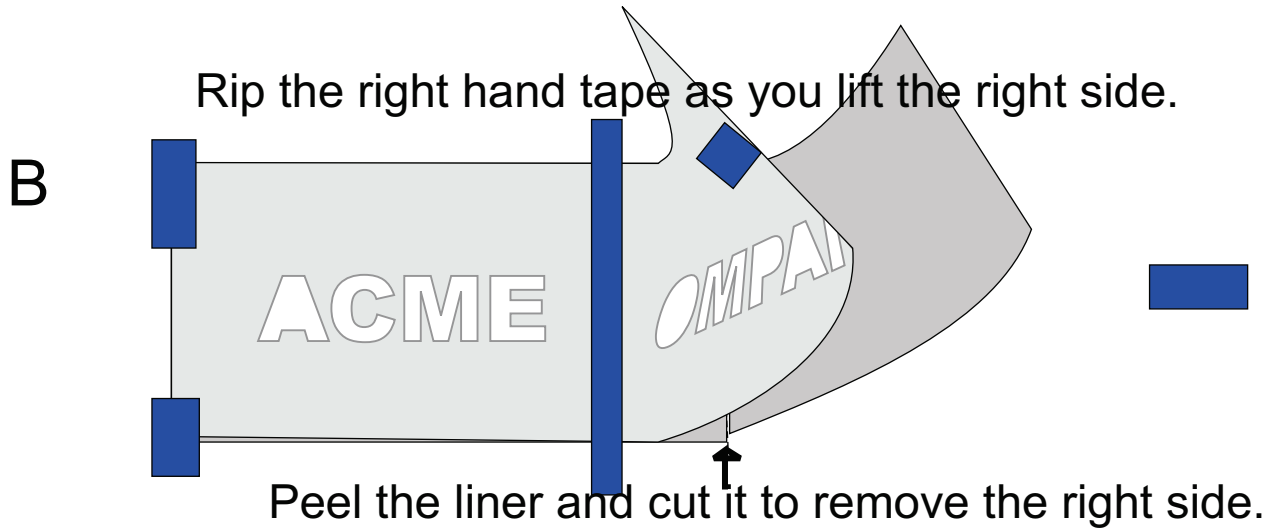

Peel the liner and cut it to remove the right side.

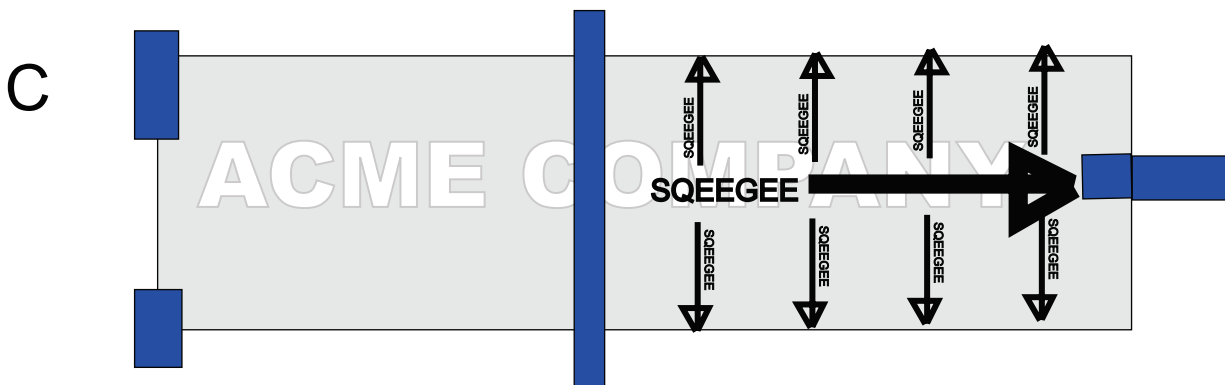

Hold sheet taut and align the tapes and squeegee as shown starting with the left to right.

Hint. Strong deliberate strokes are better than light uncontrolled strokes. You are trying to squeeze the air out with one stroke.

Repeat B & C for the left side.